

**PART LIST**

- 1: Housing and Bearing assembly
- 2: Reciprocating block
- 3: SS-Bushing
- 5: Yoke
- 6: SS-Plunger
- 7: SS- Packing Nut
- 8: Bearing
- 10: Eccentric Wheel
- 12: Roll Pin
- 15: SS- Priming Valve
- 18: SS- Suction
- 19: SS- Discharge
- 20: Screw
- 21: Set Screw
- 25: Wiper
- 28: Packing Bushing
- 33: Packing set
- 35: SS- Plunger
- 36: AC or DC explosion proof motor
- 37: Coupling
- 38: Spacer
- 39: Coupling
- 40: Gear reducer
- 41: Aluminum Housing
- 42: Mounting Plate

